







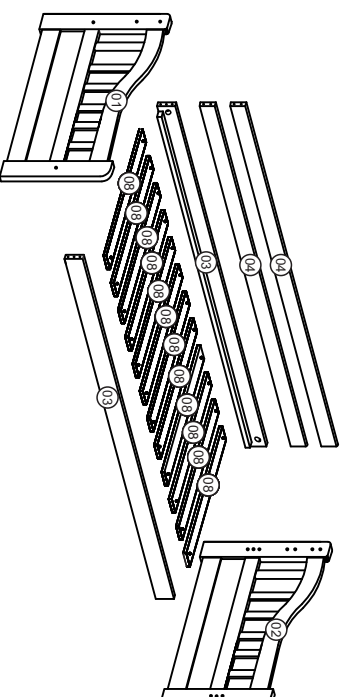



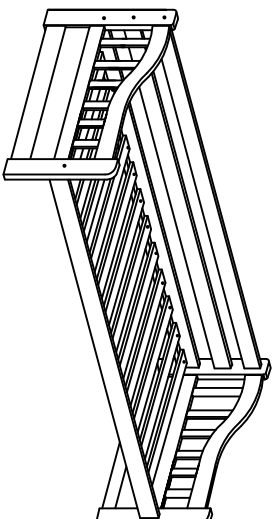


Sofá Cama American




A	 Ø10x40mm	12
B	 Ø1/4"x80mm - 017	04
C	 Ø7x70mm - 17	04
D	 Ø3,5x30mm	24
E	 Ø1/4"x25mm	04
F	 4mm	01
G	 SPACER Ø83x57	01




0:45min

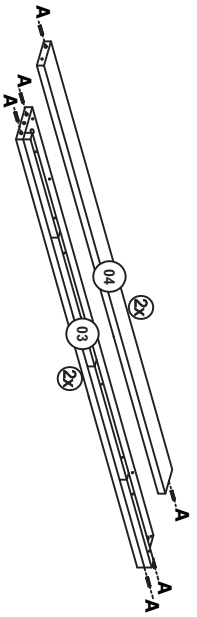


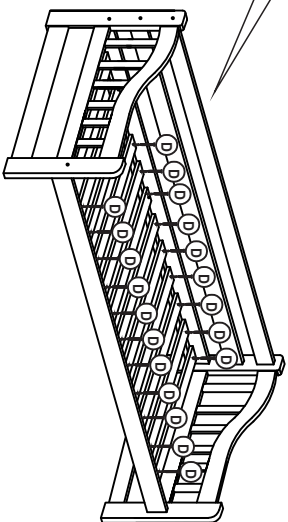
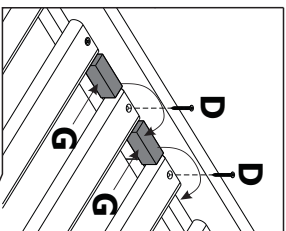
01





A
010x40mm
12X

03

D
03,5x30mm
24X



02

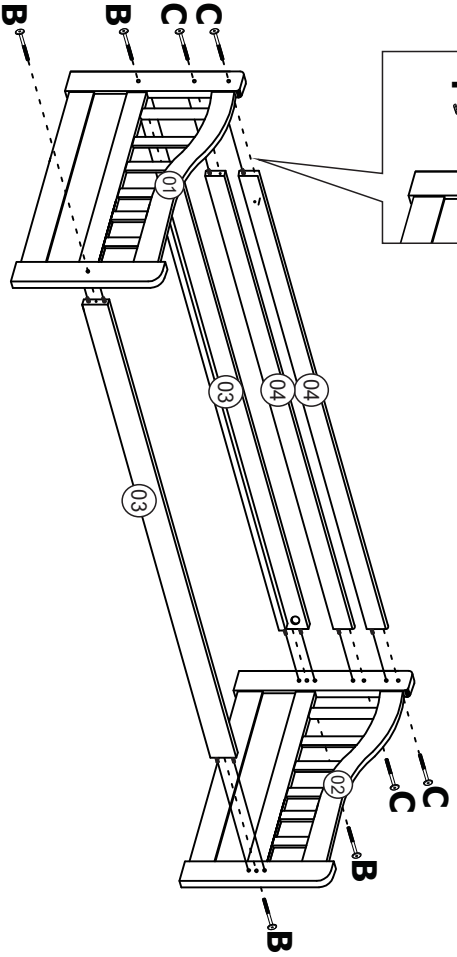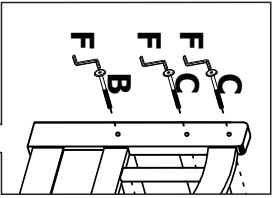


F
4mm
01X

E
01/4"x2,5mm
04X

B
01/4"x80mm - 017
04X

C
07x70mm Cab. 017mm
04X

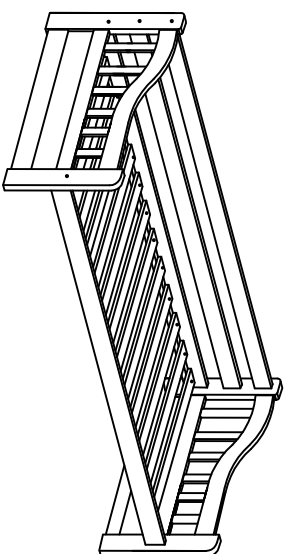

03

D
03,5x30mm
24X

