


# CÔMODA

## REF.: CM 7401

### MANUAL DE MONTAGEM

### INSTRUCCIONES DE ARMADO

### ASSEMBLE INSTRUCTIONS

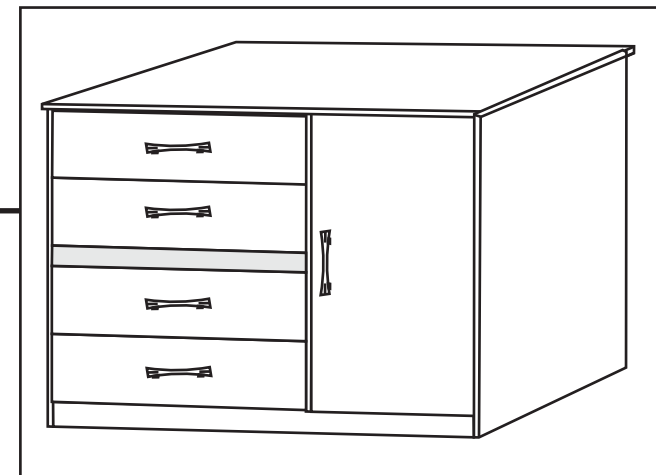

#### FERRAGENS / HERRAJES / IRONWORKS

<b>A</b>		Cavilhas 6 x 30 Tacos Pegs
<b>B</b>		Puxador Tirador Handle
<b>C</b>		Parafuso 3,5 x 40 Tornillo 3,5 x 40 Screw 3,5 x 40
<b>D</b>		Prego 10 x 10 Taxa 10 x 10 Nail 10 x 10
<b>E</b>		Cantoneira Acorrale Corner
<b>F</b>		Parafuso 3,5 x 12 Tornillo 3,5 x 12 Screw 3,5 x 12
<b>G</b>		Parafuso 3,5 x 25 Tornillo 3,5 x 25 Screw 3,5 x 25
<b>H</b>		Calço p/ dobradiça Calzo w / bisagra Shim w / hinge
<b>I</b>		Corrediça Metalica Corrediza Slider
<b>J</b>		Suporte Apoyo Support
<b>K</b>		Cola Cola Glues
<b>L</b>		Sapata Zapato Shoe
<b>M</b>		Dobradiça Bisagra Hinge
<b>N</b>		Prego 13 x 15 Taxa 13 x 15 Nail 13 x 15

